



FrameMaster™ Point Driver (FLET 07-500) Operation & Maintenance



For sales, service and spare parts

www.apm-mouldings.com.au

APM Mouldings 120-130 Bolinda Rd Campbellfield, VIC 3061
Ph: 03 8301 9199 | Fax 03 9357 4077 | Email apmoffice@chamton.com
www.apm-mouldings.com.au

Australian Owned Family Company
Quality Moulding Manufacturers and Distributors

FOR ORDERS
Available 24/7



FRAMING OPERATION

Your FrameMaster™ is factory set for framing points. Order #08-950 is available in boxes of 3,000.

INSERTING FRAMING POINTS

1. To insert a stack of framing points (A) pull follower knobs (B) up and rotate to the locked position. Figure 1.

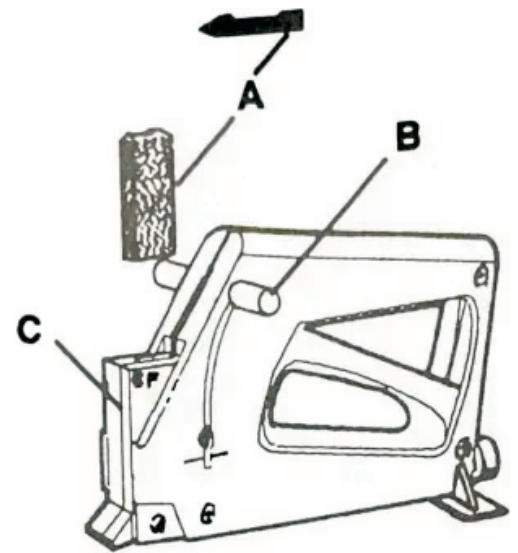


Figure 1

2. Insert the points into the slot in the magazine (C) and release the follower knob so it can apply pressure to the stack of points. Figure 2.

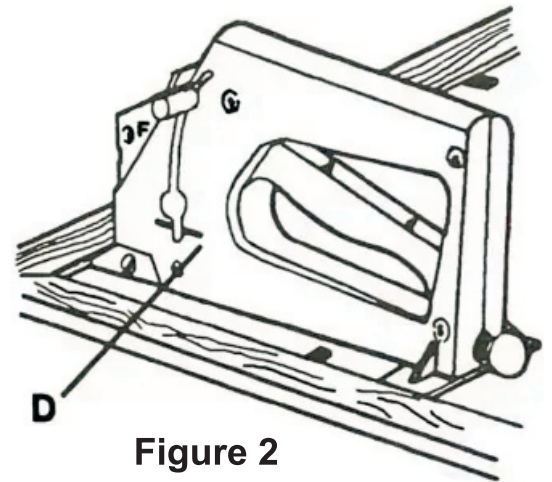


Figure 2

3. Reload points when the follower knob reaches the RELOAD position (D). There are 100 points per stack.

PRESSURE ADJUSTMENT

The pressure adjustment (E) will affect the depth of penetration of the point in wood. Although factory set accommodates most frames, the depth can be increased by turning the knob clockwise and decreased by adjusting it counterclockwise. Figure 3.

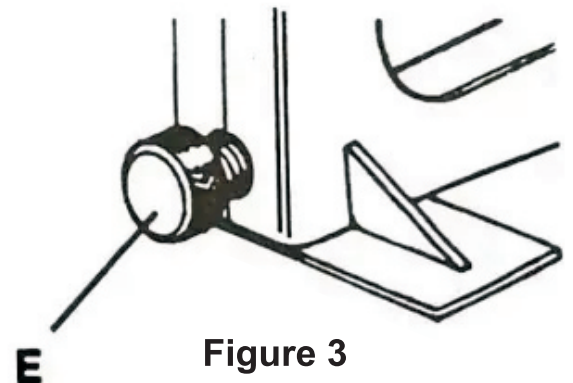


Figure 3



WARNING

Do not operate the FrameMaster unless the nose is against the wood, otherwise, the point may injure you or someone nearby.

GLAZING

CHANGING THE MAGAZINE FOR GLAZING POINTS

The magazine (F) must be removed, inverted and reinstalled to convert to glazing points (G) which are shorter than framing points. Replacement glazing points, order #08-980 are 100 per stack and 5,000 per box.

1. Raise the follower knob and lock it out of the way as you would when loading points. Remove any points still in the magazine.

2. Remove the screw and nut (H) at the nose of the FrameMaster™ and slide the magazine out the front.

Figure 4.

3. Turn the magazine upside down and reinsert it. Replace the screw and nut and tighten firmly. You will now see the G stamped on the upper side of the magazine. Figures 5 & 6.

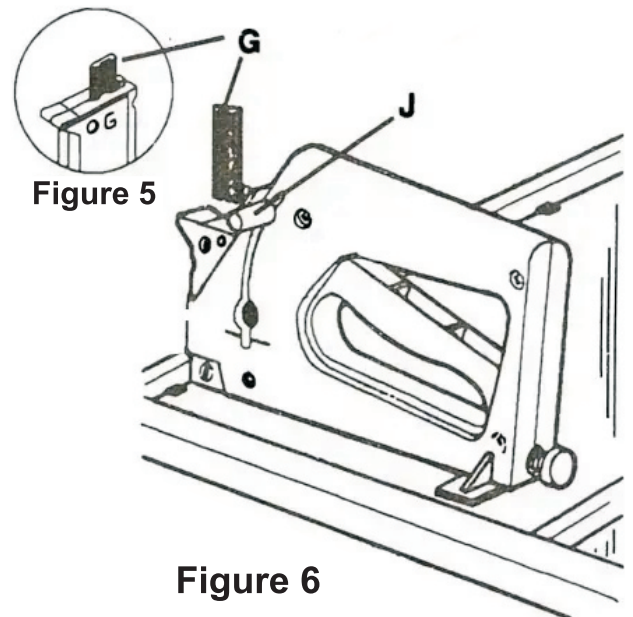
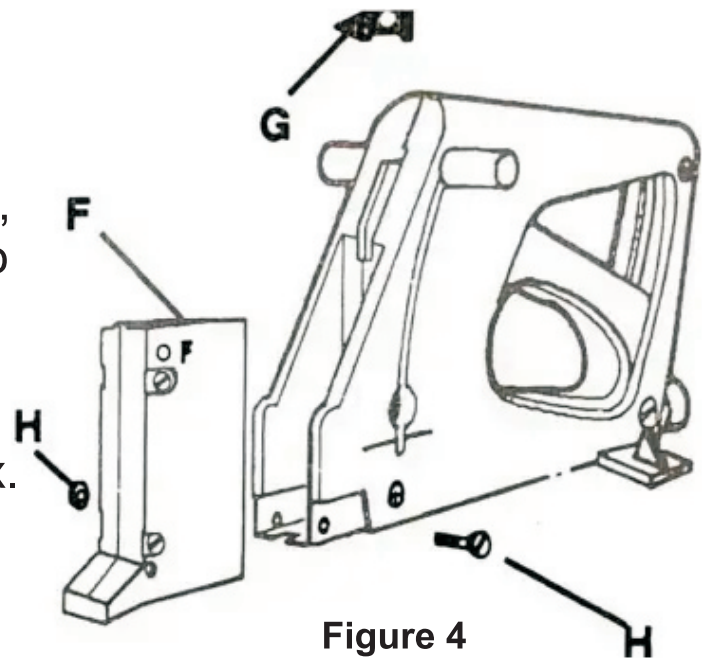


Figure 6

INSERTING GLAZING POINTS

The glazing points must be loaded in the front of the magazine cavity. Figure 5. Release the follower (J) to apply pressure to the top of the stack of points.

CAUTION


Do not use framing points in the glazing position or glazing points in the framing position. Note the symbols on the top left of the magazine, F for framing and G for glazing.

GENERAL OPERATION OF THE FRAMEMASTER™

1. Whether framing or glazing, back up the wood with a firm object to assure proper penetration of the point and avoid shocking the frame.
2. ALWAYS keep the magazine loading area free of foreign matter.

MAINTENANCE AND TROUBLE SHOOTING

PROBLEM	PROBABLE CAUSE	ACTION
Does not fire point.	Out of points.	Reload new stack of points
	Point jammed.	Remove points & magazine. Remove jammed points & clean magazine.
Fires double points.	Magazine screw loose	Tighten nut firmly.
Point penetration not deep enough.	Frame not firmly backed up	Use firm backing.
	Pressure adjustment loose	Tighten pressure screw.

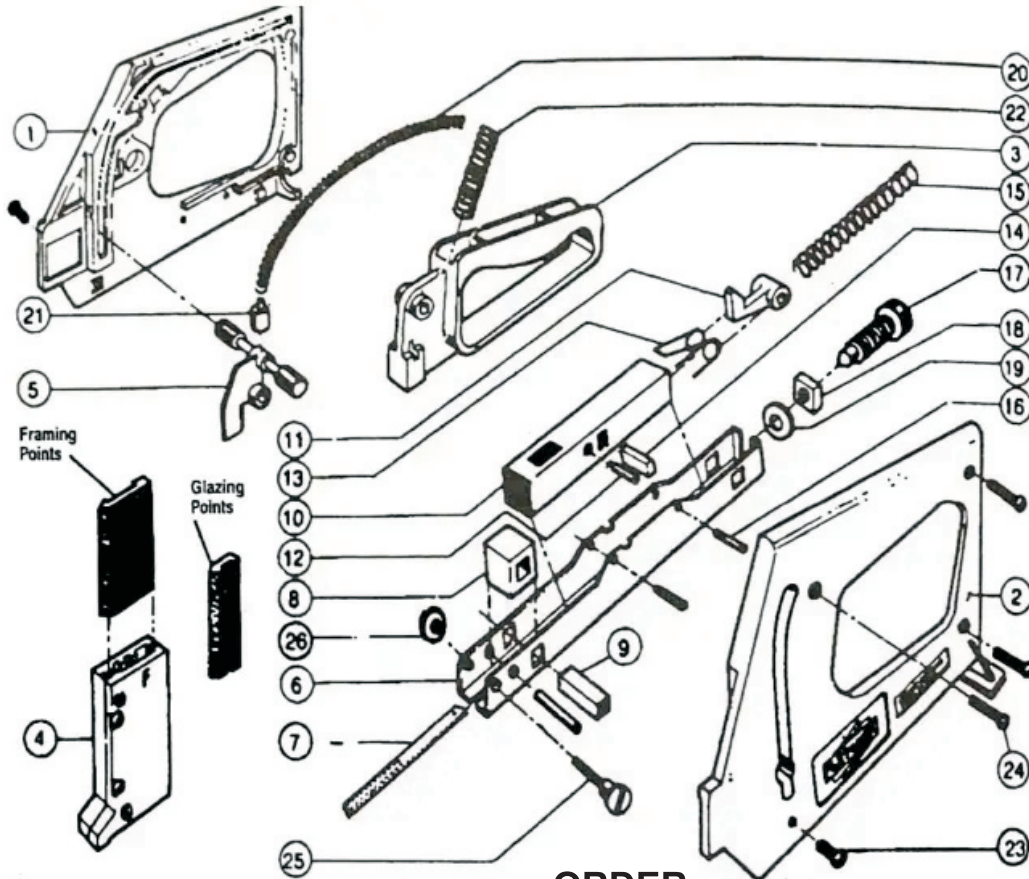

ORDER				ORDER			
ITEM NUMBER	PART NAME		QTY	ITEM NUMBER	PART NAME		QTY
1 12-726	Handle (Right Hand)		1	14 12-726	Spring Stop Plate		1
2 12-727	Handle (Left Hand)		1	15 12-727	Main Spring		1
3 12-702	Trigger Assembly		1	16 12-702	Guide Pin		3
4 12-728	Magazine Assembly		1	17 12-728	Adjusting Knob		1
5 12-704	Follower Assembly		1	18 12-704	Square Nut		1
6 12-729	Channel		1	19 12-729	Washer		1
7 12-730	Push Plate		1	20 12-730	Follower Spring		1
8 12-707	Bumper		1	21 12-707	Cap		1
9 12-708	Stop Bar		1	22 12-708	Trigger Spring		1
10 12-709	Hammer		1	23 12-709	6-32 x 3/8 Screw		2
11 12-710	Pawl		1	24 12-710	8-16 x 5/8 Screw		3
12 12-711	Pawl Pin		1	25 12-711	Magazine Spring		1
13 12-712	Double Torsion Spring		1	26 12-712	Magazine Nut		1